SUN KID – WONDERCARPET – CHAIN &\$\$' '!'G?, '

.

DAILY CHECKLIST FOR 100 DAYS OF OPERATION

OPERATING SEASON

OWNER:



A - 6460 Imst/Tirol Tel (+43) 05412.68131 Fax (+43) 05412.68132 e-mail: office@sunkid.at

Website: www.sunkid.at
UID-Nr: ATU42030100

Y	ΕÆ	٩R	O	F	

TYPE: LENGTH:

MOTOR:

MANUFACTURE:

IF PROBLEMS - CONTACT:

WEEKLY TEST (7 DAY PERIODE)

- Carefully de-icing under the driving and return drum.
- Assurance that the conveyor chain is properly tensioned and operates smoothly
- Test of the back-stop (it must not move in the locked direction)
- Check the abrasion of the chain and guide lines. Pay attention to loosen screws.

On	Date	Completed by:	Problems/check
Problems			
Contacted at checks			

Duration of daily "ABC"-check: dependent on the length of the belt: 3 – 5 minutes. Yearly maintenance and gear oil change: see manual

Testbogen Kette E200Hdoc

DAILY PREOPERATIONAL INSPECTION

A) Safety Lid Check:

Using the little finger, check the function of the Safety Lid. Lift shall stop within 4 mm (1/8") of travel. Cover up both light sources: Belt (chain) must stop after 2 seconds Once the stop has been initiated, the safety lid shall move freely and without obstruction until it is hidden under the unloading platform.

B) Belt Surface Check:


Operate the chain for at least one complete revolution, check for the following and correct as necessary: That no chain elements are missing, cracked, or broken.

- That all the rubber grommets are present and securely in place.
- surface.
- That no excessive gaps or holes exist between the snow and carpet walkways or between the chain and carpet walkways.
- That the structural integrity of the carpet-frame has not changed. With the carpet stopped, walk down the centre and check for excessive flex, bending and instability in the frame.
- That snow and ice build-up under the drive and return drums have not occurred.
- That the entrance-ramp to the belt is maintained level for 2-meters ahead of the belt.
- That the unloading ramp is slightly sloping away from the belt for 1.5 2 meters.
- That excessive build-up of snow and or ice on the carpet hasn't developed that could cause a user *Test of the back-stop (it must not move in the locked direction) to slide backwards.
- That each carpet walkway is securely in place and locked-down.

CHECK LIST:


- Safety lid: After 4 mm (1/8") of moving belt must stop
- 100 mm 4" smooth moving of 6
- between the belt and all covering parts (rubber, plastic) a maximum gap of 4 mm (1/8") is permitted
- Max. speed stop max. stopping distance permitted is 160 mm (6 1/3")
- Make a run of a total belt round and pay attention to damaged elements and loose rubbers Any damage has to be repaired immediately!

Otherwise you risk serious accidents with injury to persons!

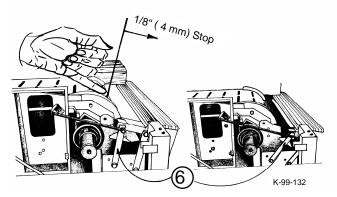

ATTENTION

IF THE CHAIN HAS BEEN MOVED IN BOTH DIRECTION, DON'T FORGET TO PUT IT (RED PLASTIC) BACK INTO WORKING POSITION.



C) Monitoring Eye d5 (option)

Arrangement

In case of a belt damage, or a failure in the safety system stop the belt immediately, until a qualified person repaired it.

If there is a failure in the safety gate it can be by-passed. For the repairtime only direct supervised operation is allowed.

That each of the splice rods are securely in position and not extending past the edge of the chain When the weather conditions are critical, hourly, in worst case permanent inspection and maintenance of the loading and unloading area is necessary.

WEEKLY MAINTENANCE

*Carefully de-icing under the drive and return drum.

*Assurance that the conveyor chain is properly tensioned and operates smoothly otherwise increase chain tension by fixing the tension cord brackets to the next attachment hole.

*Check the abrasion of the chain and guide lines. Pay attention of loose screws.

Driving station

GENERAL MAINTENANCE

General foundation and all structural, mechanical and electrical components shall be inspected regularly and kept in a state of good repair:

A) Conveyor belt:

Inspect the belt alignment daily

No belt-contact with the metal structure is allowed

No contact with oil or grease

At the end of the daily operation, cover the belt with a plastic-awning. Make it storm-resistant.

B) Drums and rollers:

Rubber surfaces - keep free of oil and grease

Grease driving-drum-bearing every 200 hours. All other bearings are life time greased

Keep drums and rollers ice-free

Belt-tensioning-system:

At the end of the operating season, unhook the rubber cords.

No contact with oil or grease.

D) Electrical control system:

Inspect plugs and wires daily

At the end of the operating season, store all parts inside

Structures:

At the end of the operating season, dismantle the structure and store indoors.

The belt-supporting-surface must be smooth and even. No edges. No gaps. Watch the location of the stainless steel sheets.

Gear box:

After 5000 operating hours or 5 years the gear oil must be changed.

Each gear oil for temperatures of -25°C is possible.

			fter- ation h)	C*Option monitoring-eye, if installed Name Tester	If o.k. Prior to operation			Prior to after- noon operation (after 3 h)			C*Option monitoring-eye, if installed Name Tester			
Α	В	C*	Α	В	C*	Signature	Date	Α	В	C*	Α	В	C*	Signature
						-								
								1						
	ор	operati	operation	Prior to operation A B C* A A C C A A C C C C	Prior to operation A B C* A B A C* A B A B C* A B A C* A	Prior to operation (after 3 h) A B C* A B C* A B C* A B C* A B C* A B C* A B C* A B C* A B C* A B C*	Prior to operation Prior to operation Prior to afternoon operation (after 3 h) A B C* A B C* Name Tester Signature Signature C*Option monitoring-eye, if installed Name Tester Signature	Prior to operation operation (after 3 h) A B C* A B C* A B C* A B C* A B C* A B C* A B C* A B C* A B C* B C*						

Problems:

Date: